

4WAB Directional Warning Arrow and 4WABLED (LED version)

Installation and operating instructions

1. The package should contain the following:
 - a. 55" x 13" Aluminum Arrow with 10 incandescent or 10 LED lamps
 - b. Control head with 3 rocker switches attached to 25' (300") of cable
 - c. Instruction sheet
2. Attach the 4WAB Arrow using the built in flange
3. Install the 4WAB control head to the dash using bolts provided.
4. Connect the red/black duplex wire (red to power, black to ground).
5. Run the cable from the 4WAB arrow to the control box and connect

Operating Instructions:

1. For proper operation, the center rocker switch must be turned to the "on" position to give the entire unit power. When you push the center rocker switch, the 4 center lamps on the 4WAB will flash. (mode # 1)
2. For the left arrow, push the center and the left rocker switch, the left 7 lamps will flash. (mode # 2)
3. For the right arrow, push the center rocker and the right rocker, the 7 right lamps will flash. (mode # 3)
4. For both arrows, push all 3 rocker switches. All 10 lamps will flash. (mode # 4)

YOU MUST ENGAGE THE CENTER ROCKER SWITCH TO OPERATE

4WABS "Split" Directional Warning Arrow and 4WABSLED (LED version)

1. The package should contain the following:
 - a. 2 – 21" x 13" Aluminum Arrow sections, with 5 incandescent or LED lamps each, attached by a 10' (120") interconnect cable
 - b. Control head with 3 rocker switches attached to 25' (300") of cable
 - c. Instruction sheet
2. Follow installation instructions # 2 through # 5 above

Operating Instructions:

1. For proper operation, THE CENTER ROCKER SWITCH MUST BE TURNED TO THE "ON" POSITION. This rocker switch does not activate a mode in the split arrow version, but it must be turned "on" for the 3 split arrow modes to operate
2. For the left arrow, push the center and the left rocker switches, the 5 lamps on the left arrow section will flash. (mode # 1)
3. For the right arrow, push the center and the right rocker switches, the 5 lamps on the right arrow section will flash. (mode # 2)
4. For both arrows, push all 3 rocker switches. All 10 lamps will flash. (mode # 3)

For information on mounting options, please contact North American Signal Company at 877-246-6274.