



Installation and Operating instructions for the LED625F-X

1. Prepare a flat area on the vehicle surface by wiping it clean and deciding where the wire will enter the vehicle
2. Drill a 3/8" hole in the vehicle surface for the lead wires to enter the vehicle
3. Place the base gasket in position on the surface of the vehicle
4. Position the LED625F-X on the gasket with the mounting holes on the light matching up with the pre-formed holes in the gasket
5. Route the power wires through the hole in the roof to the power source. Hook up the power (+ red) and ground (- black) wires and test.
6. The unit comes with 4 user selectable flash patterns. To adjust the flash patterns, use the push button on the base of the light. See photos below.
7. Affix the light in position with the three # 8 screws.

**Use button on base to determine the pattern.
With the power on push button.**

Choose from:

1. 60 single flash / min
2. 72 quad flash / min
3. 72 hex flash / min
4. 72 Reverse QF / min
5. 32 Progressively Brighter bursts / min

