

# RECOMMENDED MOUNTING INSTRUCTIONS

## For Light Series - LED4000/LED4001

\*\*\*Proper installation of this product is the sole responsibility of the installer\*\*\*

### **INSTALLATION:**

- 1. Locate a flat surface on vehicle and confirm adequate space is available LED4000/1 requires 5" x 1.75"
- Use center-punch if available to start 2 mounting holes and 1 wire exit hole for the 4000/1
   Drill two 7/64" for mounting holes and 3/8" hole/s for wire exit USE THE GASKET PROVIDED
- 4. Insert wire through center hole and position mounting screws in holes.
- 5. Connect red wire to power (+) with optional 3A fuse (not provided), and black wire to ground (-)
- 6. Use screws provided to secure LED lamp into position

#### **OPERATION:**

- 1. To select flash pattern touch yellow wire exiting the rear of the unit to red wire 12V (+)
  - a. Hold for less than one second to move to next pattern
  - b. Hold for more than one second to move to previous pattern
  - c. Hold for more than 5 seconds to reset to default (# 1 on carton list)
  - d. See list below for available patterns
- 2. For sychronized flash patterns
  - a. establish the same pattern on both units (recommended)
  - b. connect the two yellow wires. (Note: lightheads will not sync on random pattern)
- 3. For alternating flash patterns
  - a. establish the same pattern on both units (recommended)
  - b. connect the two yellow wires
  - c. connect one white wire to power 12V (+) from one of the light heads for alternating display
  - d. for alternating groups of heads one white wire from each light in the group goes to red 12V (+)

#### **FLASH PATTERNS:**

9 - Single (All)
1 - Single (Split)
2 - Double (Split)
3 - Quad (Split)
4 - Quint (Split)
19 - Single (All)
10 - Double (All)
11 - Quad (All)
12 - Quint (All)
13 - Mega (All)
14 - Ultra (All)

5 - Mega (Split)
6 - Ultra (Split)
15 - Single-Quad (All)

7 - Single-Quad (Split)
16 - Single H/L (All)
17 - Steady 2 (California)

8 - Single H/L (Split) 18 - Steady 4 (All)



LED4000-X